

How do I fit my greatplatemate number plate surround?

Adjust your surround to the size required by 'dry fitting' your number plate into the surround and then remove it and mark which holes you will be inserting your screws through.



Thoroughly clean the area where the 5 sticky pads attach (pads included) and apply the pads leaving the protective film on the outward side.




Clean the back of your number plate with the degreaser.

Remove the four spacers that are part of the back of the surround



Place the spacer/s over the holes you marked, 1 spacer per screw hole is usually enough, and putting a piece of sticky tape over the spacers will stop them from moving about– the tape will not be seen from the front. 'Dry fit' the number plate again to make sure the surround hasn't moved.

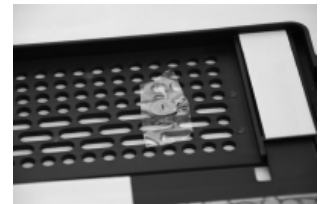

Then remove the protective film from the sticky pads.



Place the screws through your number plate and lower the plate, so that the screws go through the spacers and the number plate drops into the adjusted surround. Caution - if you are using the screws that have just come off your vehicle, make sure they are long enough to hold the combined width and weight of your number plate and surround.

Press the number plate very firmly onto the sticky pads, making sure the screws do not fall out.



Offer the surround and plate up to your vehicle and provided you are using the same holes for fixing as when the plate came off you can screw your plate straight back on – making sure that neither screw slips out during the process.

We have tried to put as many screw holes into the back of the surround as possible, however, if your holes don't match our holes you may have to drill new ones.



Sticky.

- (1) Adjust your surround to the size required by 'dry fitting' your number plate into the surround and then remove it.
- (2) Thoroughly clean the area where the 5 sticky pads attach (pads included) and apply the pads leaving the protective film on the outward side.
- (3) Clean the back of your number plate with the degreaser.
- (4) 'Dry fit' the number plate again to make sure the surround hasn't moved.
- (5) Remove the protective film from the sticky pads and press the number plate very firmly onto the sticky pads.
- (6) Clean the back of the surround and the area on your car where you'll be sticking the surround to with degreaser.
- (7) Stick your sticky pads (not supplied) to the rear of the surround, line everything up carefully and press against vehicle.